

User Policy

Any intellectual property including copyright of this software belongs to TOHNICHI MFG.CO., LTD., referred to as TOHNICHI, thereafter. This agreement is made between the user and TOHNICHI. TOHNICHI considers the user has agreed with the conditions upon his/her installing the software.

1. Use Consent

This software can be used within the following terms.

- (1) This software must be installed to PC or external memory device owned by the user.

2. Prohibitions

Not allowed to use the software in the following ways.

- (1) Disassemble, Reverse-Engineering and analyzing the software with any other way.
- (2) Provide the software to third parties.
- (3) Provide the software through internet email or memory devices.
- (4) Provide the software via internet as WWW, FTP, LAN and others to any third parties.
- (5) Any act of copyright infringement, including modifying the software.

3. Exemption of liability

- (1) TOHNICHI does not guarantee the integrity, accuracy, usability, or compatibility of this software for any specific use. TOHNICHI does not guarantee a third party should not infringe on copyright.
- (2) TOHNICHI is not obliged to provide to the user any technical support, etc, for this software.
- (3) TOHNICHI shall not be liable for any damage derived from installing and using of this software or distributing to a third party (including but not limited to breakdown of the device or program, discontinuation of business, loss of information, or financial loss.)

4. Termination of agreement

- (1) The user is exempted from the agreement when he/she delete the software from the device.
- (2) If the user should violate any of the agreement stated above, TOHNICHI possesses the right to terminate the agreement. In such case, the user must delete the software from his device immediately.

5. Others


- (1) This agreement is in accordance with the laws of Japan.
- (2) The parties hereto shall submit to the exclusive jurisdiction of the Tokyo District Court of Japan with respect to any dispute arising from this agreement.

System requirements

OS	Microsoft Windows 7 SP1 / SP2 / SP3 Microsoft Windows 8、 Microsoft Windows 8.1 Microsoft Windows 10 If .NET Framework 4.0 is not installed, download it from the Microsoft home page.
CPU	Celeron 1GHz or faster compatible processor
Memory size	512MB or lager memory
Hard drive size	2MB or lager hard disk

Startup Software

On Screen

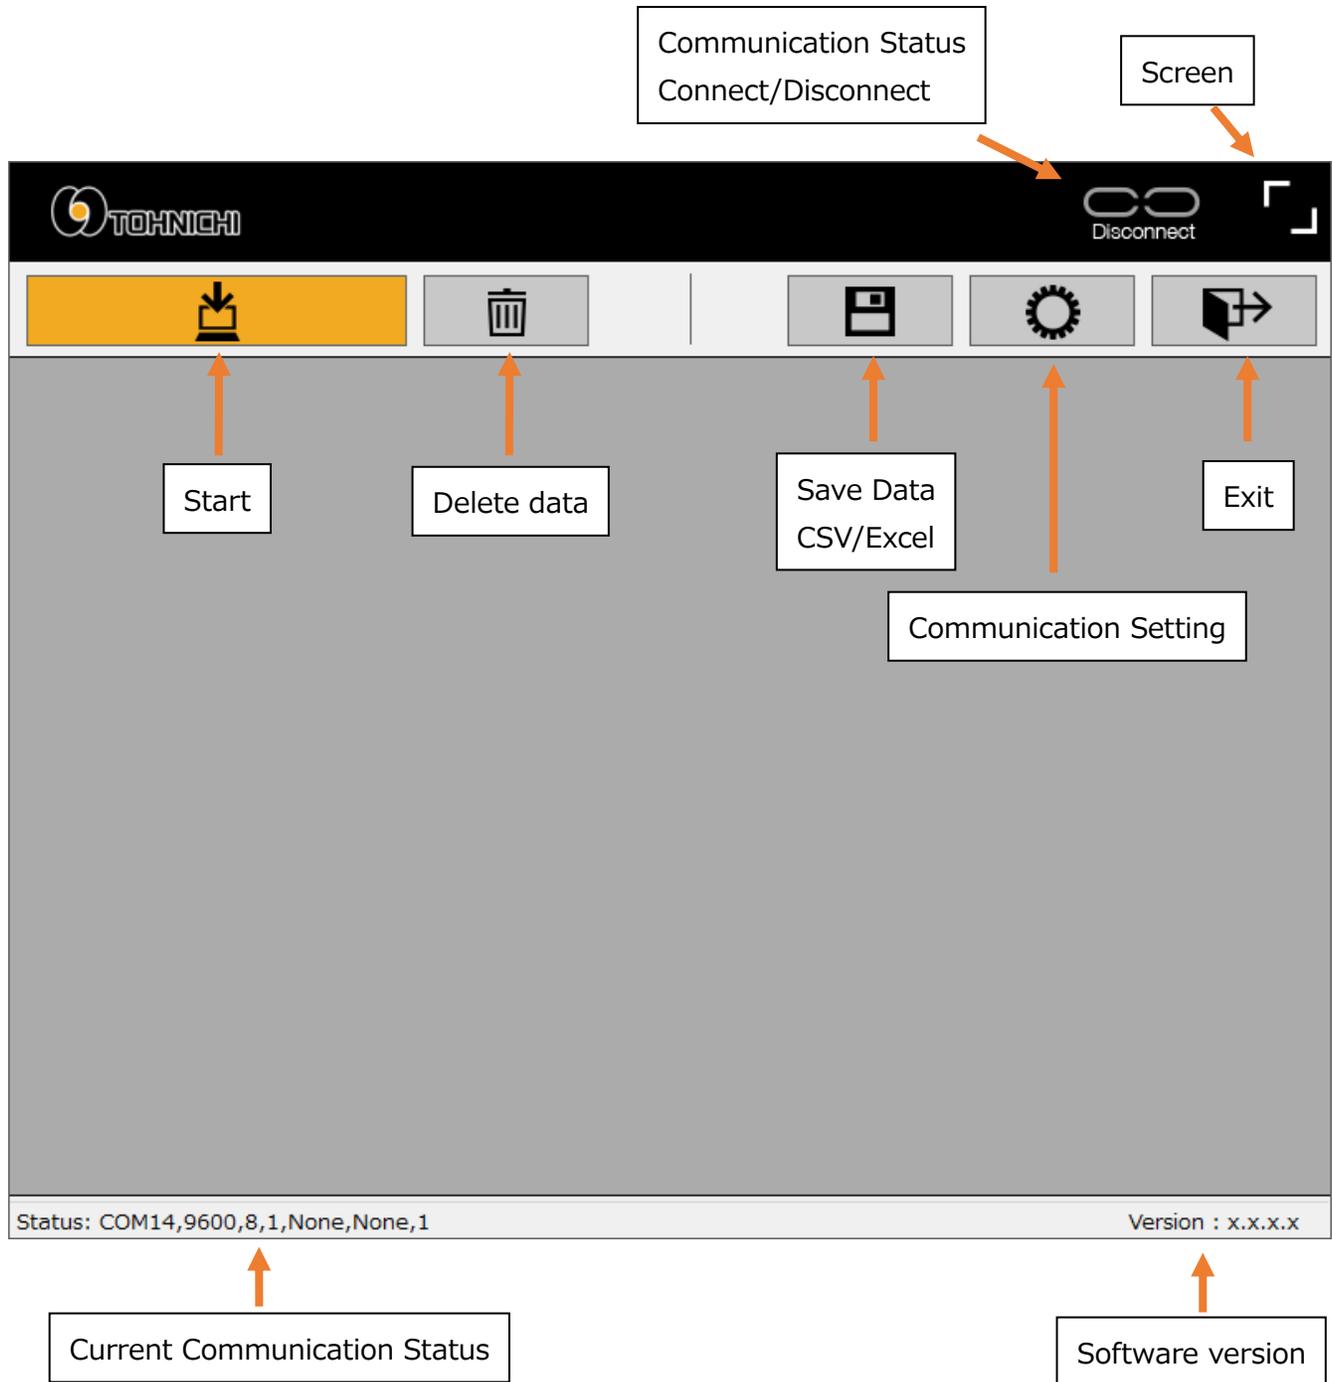

Measuring

Stop Measuring

Communication Status
Connect

The screenshot displays the TOHNICHI software interface. At the top left is the TOHNICHI logo. At the top right is a 'Connect' button with a link icon. Below the logo is a yellow button with a stop icon and an 'X'. To the right of this is a grey button with a right-pointing arrow. The main area contains a table with 10 rows of data. The bottom row is highlighted in blue. At the bottom of the interface is a status bar with the text 'Status: COM14,9600,8,1,None,None,1' on the left and 'Version : x.x.x.x' on the right.

RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...
RE	000	-00.00	nm	+000	deg	--	000000K	00/00/00	00:00:...

Status: COM14,9600,8,1,None,None,1 Version : x.x.x.x

Your Latest Data

Data Selecting

Select a file type and output redirection.

The screenshot shows a dialog box titled "Columns" with a list of nine columns, each with a checked checkbox. To the right of the list are two sections: "File Type" with radio buttons for "Excel" (selected) and "CSV", and "Output Direction" with radio buttons for "Vertical" (selected) and "Horizontal". A red circle highlights these two sections. Below the list are two buttons: a grey "Back" button with a left arrow and a yellow "Next" button with a checkmark. Orange arrows point from the text boxes to the "File Type" section, the "Back" button, and the "Next" button.

Back without saving

Next

Communication Setting

